

M LEVELD



Levelo

VENCE
10000mAh Power Bank

SKU: LVLVENCEPB10KM

Table of Contents

Product Overview	2
Specifications	2
Product Features	3
Wireless Charging Instructions	4
Schematic View	5
LED Indicators Guide	6
Safety Warnings	7
Precautions	8
FCC Statement	9
Disposal	10
Warranty	11
Contact Us	11

Product Overview

The Levelo Vence 10000mAh Power Bank is a compact, high-performance charging solution for modern devices. With Qi2 technology, it offers 25W wireless charging and strong magnets for secure attachment. It features Type-C input/output for fast recharging and efficient power transfer. Its lightweight design and powerful capacity make it perfect for on-the-go use.

Specifications

Product Size	16 × 65 × 105mm
Product Weight	191g
Wireless Output	5W, 7.5W, 10W, 15W, 25W
Type-C Input/Output	5V-3A, 9V-2.77A, 12V-2.08A, 15V/1.67A (25W Max)
Battery Capacity	10000mAh
Battery Type	Li-polymer
Total Output	5V/3A
Material	Metal + ABS


Product Features

- a. Qi2 Technology:** The power bank supports Qi2 technology, providing 25W wireless charging for fast and reliable power delivery to your devices.
- b. Ultra-Strong Magnets:** Equipped with ultra-strong magnets, the Levelo ensures a secure and stable attachment to compatible devices, minimizing interruptions during charging.
- c. Type-C Input/Output:** It includes Type-C input and output ports, allowing for quick recharging and efficient power transfer, ensuring fast and convenient charging.
- d. Compact and Lightweight Design:** The slim and lightweight build makes it easy to carry, perfect for on-the-go charging without adding bulk to your bag or pocket.
- e. 10000mAh Battery Capacity:** With a powerful 10000mAh capacity, this power bank ensures that your devices remain charged throughout the day, even during extended use.
- f. Versatile Charging:** The power bank offers multiple output levels, providing flexible charging options for a wide range of mobile devices.
- g. Fast Recharging Capability:** The Levelo Vence power bank supports fast recharging, enabling you to quickly restore its battery, so it's always ready to charge your devices when needed.
- h. Durable Construction:** Made from high-quality materials, the power bank is designed for durability, withstanding daily use and providing long-lasting performance.
- i. LED Power Indicator:** The power bank features an LED indicator that shows the remaining battery level, so you always know when it's time to recharge.

Wireless Charging Instructions

To wirelessly charge an iPhone that supports wireless charging, place your iPhone on the product as depicted in the figure on the right. The device will automatically align with the wireless charging pad, and the power bank will detect the connection.

Wireless charging will commence without the need for any button operation.


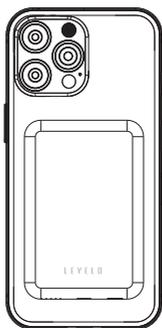


When a phone is placed on the wireless charging pad, the wireless charging function will automatically be triggered. There is no need to press the battery level check button. However, you can also press the button or connect the power bank to a charger to enable wireless charging (the wireless charging LED will light up, indicating it is in standby mode). The wireless charging LED statuses are as follows:

Wireless Charging Status	LED Status
Standby	On
Working	Solid on
Error	Blinking
Off	Off

- a. Press the battery level check button to activate wireless charging when the power bank is not charged.
- b. Wireless charging will automatically stop after about 3 seconds if no phone is placed on the charging pad.
- c. Wireless charging will restart after about 5 seconds if the phone is removed from the charging pad.
- d. Once the power bank enters sleep mode, it will automatically detect and begin charging any device that supports wireless charging.
- e. Sleep Mode: In sleep mode, the wireless charging and battery level LEDs will turn off.


Schematic View

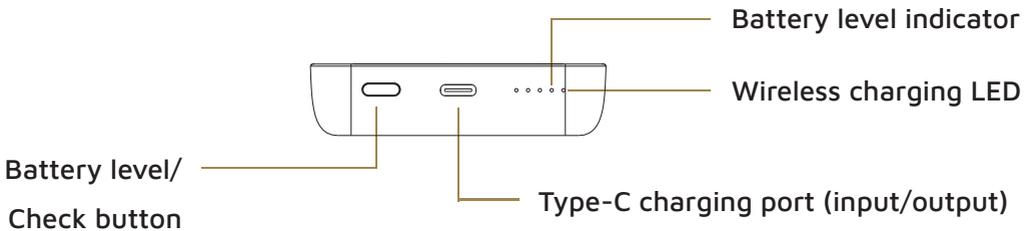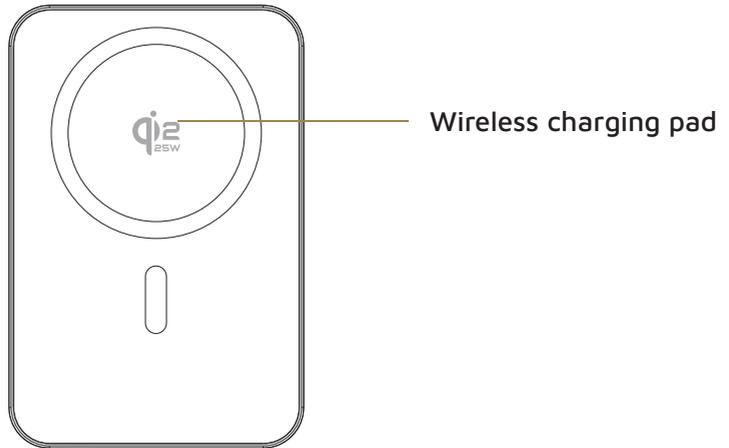

LED Indicators Guide

1. Battery Charging Indicators

The power bank can be charged using an adapter and charging cable through the Type-C port. The battery level is indicated by the LEDs as follows:

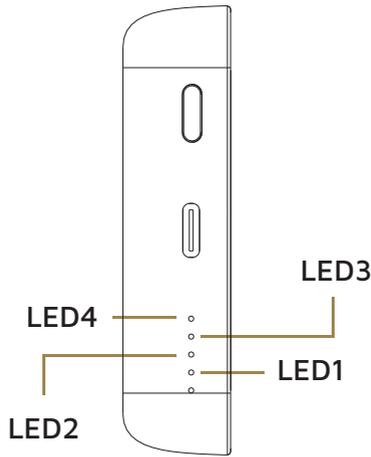

Battery Level	LED1	LED2	LED3	LED4
0-25%	Blinking	Off	Off	Off
25-50%	On	Blinking	Off	Off
50-75%	On	On	Blinking	Off
75-99%	On	On	On	Blinking
Fully Charged	On	On	On	On
Charging Error	Blinking	Blinking	Blinking	Blinking

2. Battery Discharging Indicators

This product supports both wired and wireless discharging at the same time. During the discharging process, the battery level is displayed by the LEDs as follows:

Battery Level	LED1	LED2	LED3	LED4
Undervoltage	Off	Off	Off	Off
0-25%	On	Off	Off	Off
25-50%	On	On	Off	Off
50-75%	On	On	On	Off
75-100%	On	On	On	On

Safety Warnings

Improper use of this product may cause battery failure, overheating, or even fire or explosion. Please follow these guidelines to ensure safety:

1. Use a charger that meets local safety standards to prevent electric shock or damage to the battery.
2. Do not use the product (during charging or discharging) in poorly ventilated areas, such as inside clothes, under pillows, bedding, or other items.
3. This product must not be disassembled, squeezed, punctured, or short-circuited, and should not be placed in water or fire (including near heat sources such as stoves or heaters), or exposed to environments with temperatures exceeding 140°F.

4. If the product is deformed, leaks, overheats, etc., stop using it immediately and dispose of it properly.
5. The power bank, battery, and other accessories should be disposed of in accordance with local regulations, and not as household waste. Improper handling of the battery may lead to an explosion.
6. This product contains an integrated battery that cannot be removed. Do not attempt to replace the battery yourself for safety reasons.
7. To prevent accidents, keep this product out of the reach of children.

Precautions

1. Fully charge the product before the first use.
2. Use an adapter and charging cable that meet the required specifications to charge the power bank and use it for wired charging.
3. Keep the wireless charging pad clean and free from any foreign objects. If your phone has a protective case, ensure it is non-metallic and no thicker than 3mm.
4. Ensure someone is present while the product is charging. Unplug the power supply if you plan to be away for a long time.
5. Unplug the charging cable once the product is fully charged or when your mobile phone is charged. To avoid damage, disconnect the device after wireless charging is complete.
6. If the product does not show the battery level after pressing the button, it may be in protection mode. In this case, charge the power bank to restore it.
7. If not using for a long period, keep the product at around 50 % charge and store it in a cool, dry place. Do not store the power bank fully charged to extend battery life.

8. Do not store the power bank in a fully charged or empty state for long periods.
9. Keep the power bank away from magnetic cards (such as ID cards or bank cards) to prevent damage to the magnets.
10. For safety, keep the product at least 20 cm away from medical devices like pacemakers or cochlear implants.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference; and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.
Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for assistance.

RF warning statement:

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products procured directly from the **Levelo** website or physical store comes with a 24-month warranty. **Levelo** products purchased from any of our authorized dealers are guaranteed with a one-year warranty. If you wish to extend this warranty, you'll need to go to our website at <https://www.levelobrand.com/warranty> and fill out the necessary form, making sure to include your personal information and a photo of the product. After your request has been evaluated and accepted, we'll send you an email notification to affirm the extension of your product's warranty.

For more info, please check:

<https://www.levelobrand.com/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at: Info@levelobrand.com

Website: <https://www.levelobrand.com/>

Email: Info@levelobrand.com

Instagram: [levelobrand](#)

Facebook: [levelobrand](#)